

# Ventam Systems Ltd

Unit D4, Seedbed Business Centre,  
Vanguard Way, Shoeburyness, Essex, SS3 9QY  
PHONE: 01702 382 307 FAX: 01702 382 340  
Email: sales@ventamsystems.com



## Ventam 76

### Automatic Interlock system user guide

1. IF THE RED “EMERGENCY STOP” LIGHT IS ON, THE GAS SYSTEM WILL NOT WORK BECAUSE ONE OF THE EMERGENCY STOP BUTTONS HAS BEEN PRESSED. IF A STOP BUTTON HAS BEEN PRESSED, RELEASE IT BY TWISTING AND PULLING IT ANTI-CLOCKWISE.  
WHEN THE RED “STOP BUTTON” LIGHT IS OFF, MOVE ON TO STEP TWO.
2. THE AMBER “FANS OFF” AND “GAS OFF” LIGHT SHOULD BE ON. IF NO LIGHTS ARE LIT ON THE PANEL, THE POWER IS TURNED OFF.
3. TURN ON THE POWER TO THE VENTILATION FAN(S). THERE IS ALWAYS AN EXTRACT FAN, BUT THERE MAY ALSO BE A FRESH AIR FAN TOO.
4. PRESS THE START BUTTON.
5. THE GREEN “FANS ON” LIGHT SHOULD COME ON AFTER A SHORT DELAY.
6. PRESS THE GAS RESET PUSH BUTTON – THE “GAS ON” LIGHT SHOULD NOW BE ON.
7. WHEN COOKING IS FINISHED, TURN OFF ALL GAS APPLIANCES AT THE APPLIANCE ISOLATION VALVES AND THEN PRESS THE STOP BUTTON.
8. THE RED EMERGENCY STOP BUTTON IS ONLY TO BE USED IN AN EMERGENCY.

**IN THE EVENT OF AN EMERGENCY,  
THE GAS ISOLATION VALVE MUST BE CLOSED.  
ALL DOWNSTREAM BURNERS AND PILOT VALVES ON APPLIANCES  
MUST BE TURNED OFF PRIOR TO ATTEMPTING TO RESTORE THE GAS SUPPLY.  
AFTER EXTENDED SHUT-OFF, PURGE BEFORE RESTORING GAS.**